



# USER MANUAL OF FIREMAN SWITCH



The FIREMAN SWITCH have a glass front because when an emergency situation occurs, so fireman will break the glass and turn on toggle switch then Lift will be put in Fire Mode.

## **FEATURES/SPECIFICATION:**


- Easy to install – Wall Mount
- Cost effective
- Compact in size - 75x150x18 mm
- Rugged design
- Reliable to use
- Increased Durability
- Switch Type- Toggle Switch
- Light in Weight

## **HOW TO INSTALL:**

### **FOLLOW THE STEPS FOR INSTALL:**

1. Remove the screw from bottom side of FIREMAN SWITCH to take out the back plate.
2. Mount the back plate on the suitable place as per given mounting details.
3. Do connection as per below given connection diagram.
4. And fix the front plate of FIREMAN SWITCH with bottom screw.

**MOUNTING DETAILS:**

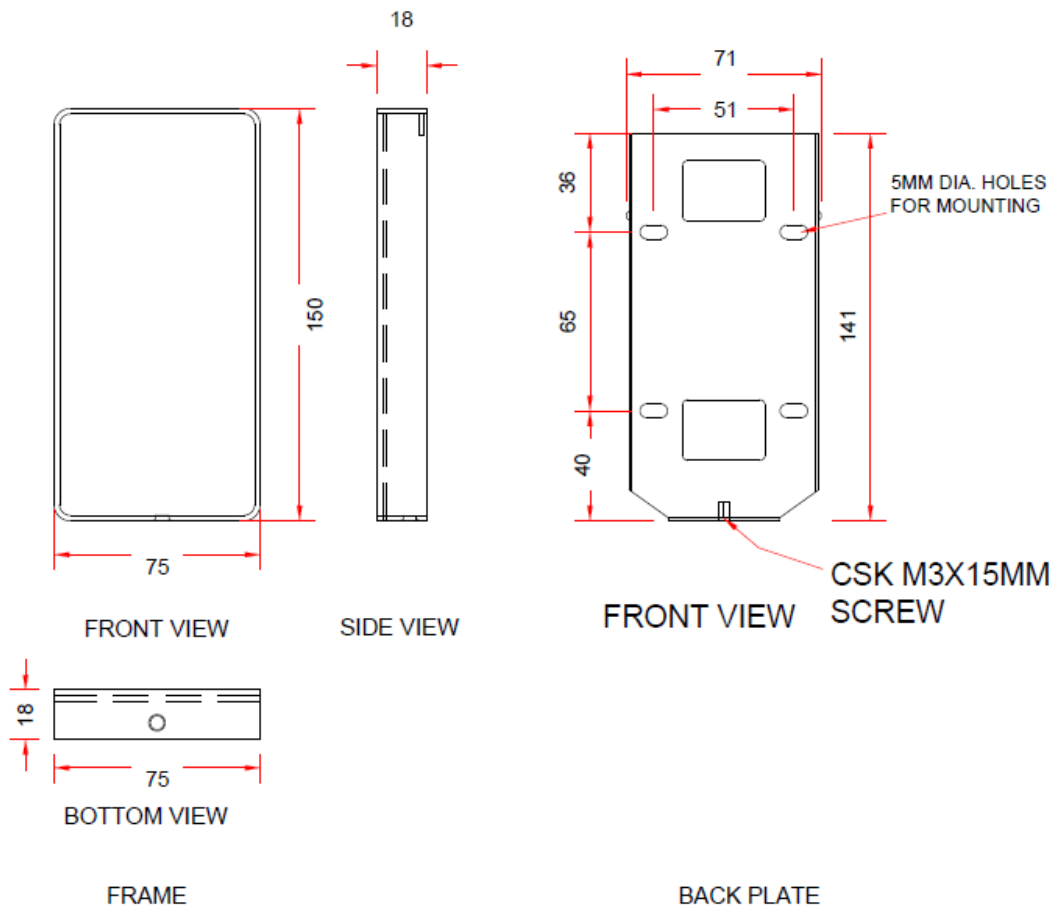

**CONNECTION DIAGRAM OF FIREMAN SWITCH**

