


USER MANUAL OF ALARM WITH FIREMAN

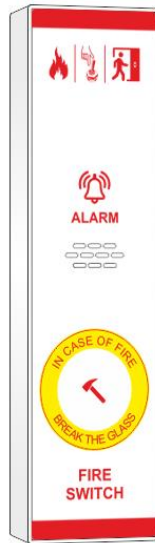

DESCRIPTION:

The Elevator ALARM is usually used to alert people that someone is stuck inside the elevator and needs assistance.

The FIREMAN SWITCH have a glass front because when an emergency situation occurs, so fireman will break the glass and turn on toggle switch then Lift will be put in Fire Mode.

FEATURES/SPECIFICATION:


- Easy to install
- Application- For Elevator
- Cost effective
- Compact in size
- Rugged design
- Reliable to use
- Increased Durability
- Power- 12V
- Switch Type- Toggle Switch
- Light in Weight
- Size – 75x275x18 mm

HOW TO INSTALL:

FOLLOW THE STEPS FOR INSTALL:

1. Remove the screw from bottom side of ALARM WITH FIREMAN SWITCH to take out the back plate.
2. Mount the back plate on the suitable place as per given mounting details.
3. Do connection as per below given connection diagram.
4. And fix the front plate of ALARM WITH FIREMAN SWITCH with bottom screw.

MOUNTING DETAILS:

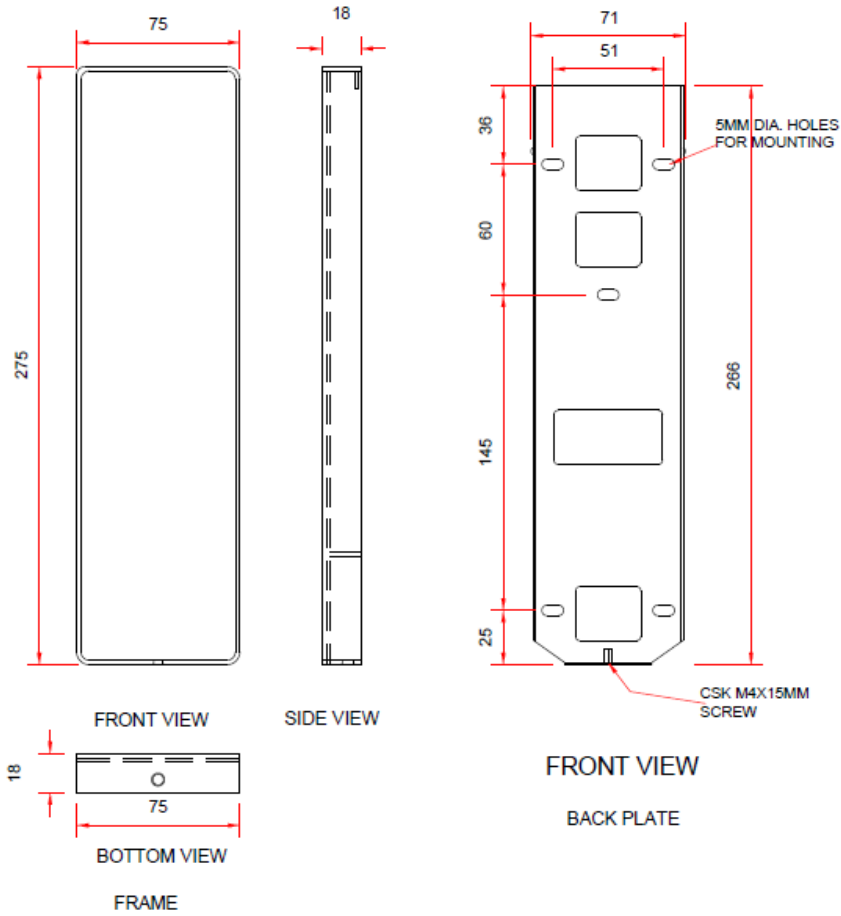

CONNECTION DETAILS:

